
Quick Installation Guide

SG60KTL

PV Grid-connected Inverter



SG60KTL Quick Installation Guide

This guide provides a general instruction of the installation procedures of SG60KTL.

NOTICE

In no case shall this guide substitute for the user manual or related notes on the device.


Make sure to read over, fully understand and strictly follow the detailed instructions of the user manual and other related regulations before installing the equipment.

Any violation could result in personal death or injury or device damage.


1 Unpacking and Inspection

Step 1 Remove the backplate and fasteners from the packaging.

Step 2 Inspect the inverter for visible damages and check the completeness of the delivery contents according to the inner packing list.

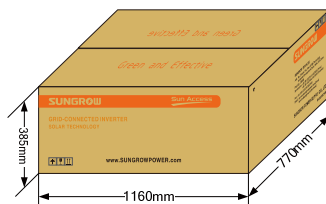

Contact your supplier if any of the contents is missing. SG60KTL is unavailable if any damage is detected.

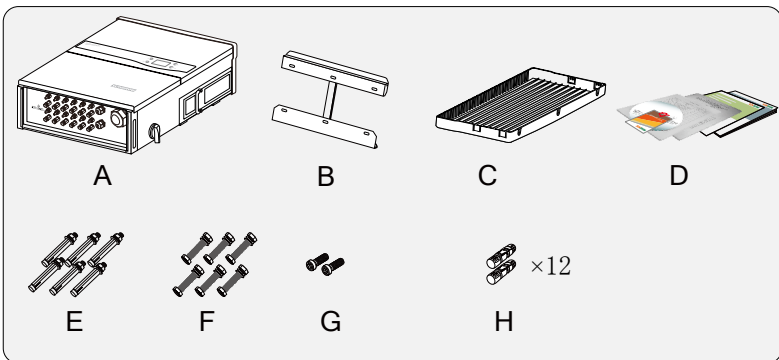


Item	Name	Description
A	Inverter	---
B	Backplate	Used to fix the inverter to the installation site.
C	Inverter cap	For better weather-proof function of the inverter.
D	Documents	Quality certificate, packing list, product test report, CD and quick user manual
E	Expansion bolts	Six units to fasten backplate to concrete wall.
F	Fasten set	Six units to fasten backplate to metal frame.
G	Fix screw	Two M4×16 screws to fix the inverter with the backplate.
H	DC connector	Twelve pairs MC4 terminals for PV connection.

2 Mounting Inverter onto the Wall

- Select the installation location and regulate the clearances of multiple inverters, referring to the user manual.
- Move the inverter to the installation site with the help of another person or the lifting device by means of the handles.
- Install the inverter onto wall as following procedures.
 - a) Fix the backplate on the wall with appropriate fixing sets.
 - b) Assemble the top cap of the inverter.
 - c) Mount the inverter onto the backplate and secure it with M4 screws.


Install backplate

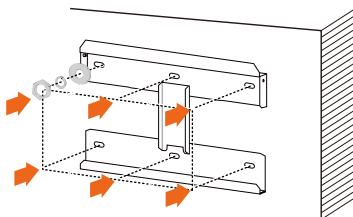


Install Inverter cap



Hang inverter

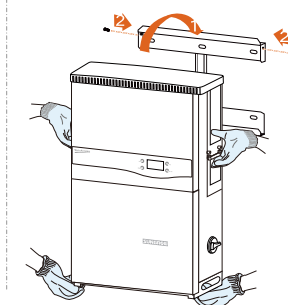


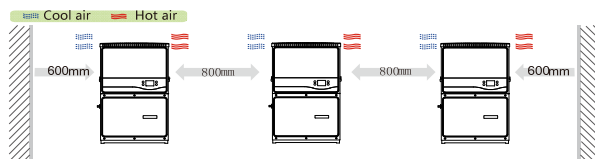

*Supplement


If the installation location is higher, the inverter can not be directly linked to the backplate, please perform following steps to lift the inverter to the level of the fixed backplate or adjacent place.

Step 1 Screw two M12-screwed lifting rings to the screw holes on top of the inverter.

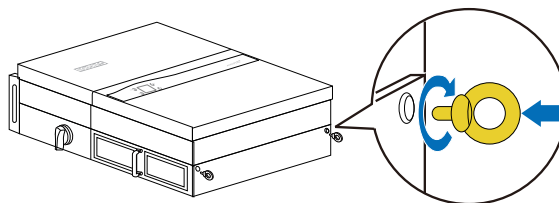

M12-screwed lifting ring is a standard component. It is not within the scope of delivery. Please purchase from the market if needed.

Step 2 Lead the rope (with sufficient load-carrying capacity) prepared beforehand through the two lifting rings to lift the inverter. Inverter is lifted to the level of the fixed backplate or adjacent place.

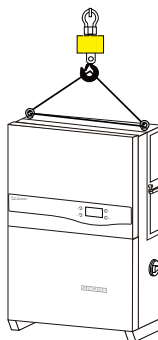

NOTICE

Please keep the inverter balance during the whole process of inverter lifting. Inverter may hit the wall or other obstacles if otherwise.

3 Electrical Connection

DANGER


Death hazards due to high voltage existing inside the inverter!

Make sure that all the DC and AC cables to the inverter are not live before you start the electrical work.

Do not turn on the AC side or DC side circuit breaker until all inverter electrical connections have completed.


3-1 Open the Connection Cabinet

Loose the six screws on the front cover of the connection cabinet and remove the front cover to see the internal layout of the connection cabinet.

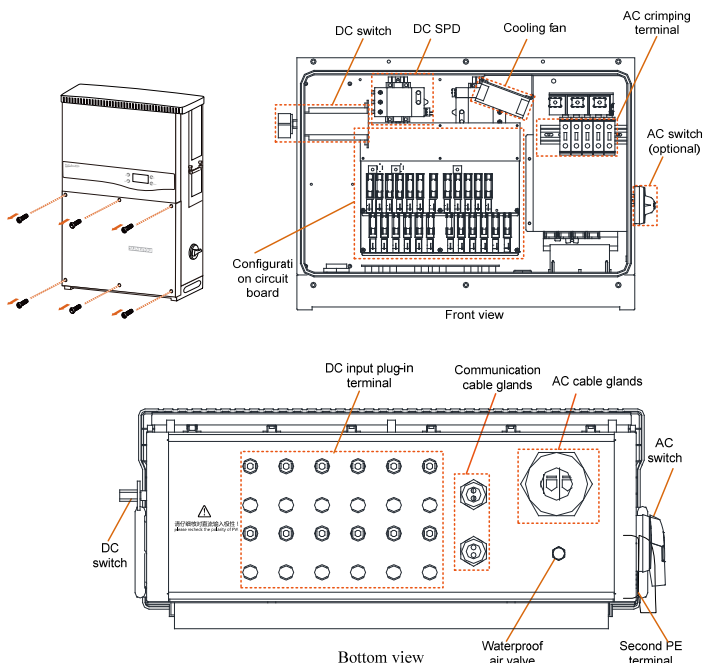

3-2 Cables Selection

- AC Cable

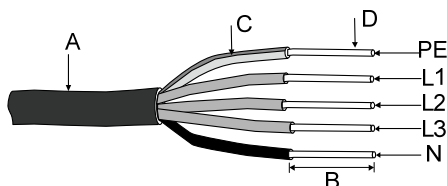

No.	Description	Remark
A	Protective layer	External diameter of the cable: 37~44 mm
B	Length of insulation to be stripped off	24 mm
C	Insulation layer	-
D	Cross section of AC cables	Range: 25-70mm ² ; recommended value: 50 mm ²

The following table gives the recommended max. length of the AC cables based on the cross-section of the AC cables.

Cross-section of the AC cable (mm ²)	Max. length of the AC cables (m)
25	0-50
35	50-100
50	>100

- DC Cables

Cross-sectional area	Cable External diameter	Max. withstand voltage	Max. input current for each PV string
4~6mm ² 12AWG~10AWG	6~9mm	1000V	12A

- Second PE Cable


Cross-sectional area (mm ²)		Recommended conductor size (mm ²)	
10AWG...8AWG	6mm ²	9AWG	6mm ²

- RS485 communication cables

Shielded twisted pair cables or Shielded twisted pair Ethernet cables.

3-3 AC Connection

Pull the cables and connect L1/L2/L3/N/PE cables ends to the corresponding terminal blocks.

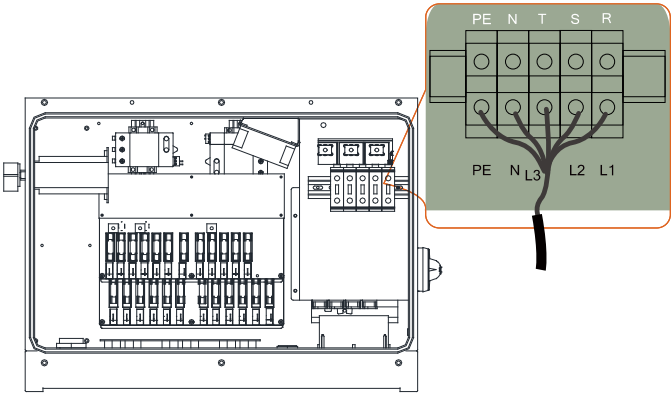

*Supplement

When the specification of AC cable protective layer you have selected is less than the recommended external diameter (37~44 mm), you need to wind the AC cable around by sealing strip in the form of spiral.

NOTICE

If the specification of AC cable protective layer is less than the recommended external diameter and no sealing strip is used, there may have moistures inside the inverter and unrecoverable damage the inverter.



The sealing strip is within the scope of delivery.

Step 1 Wind the AC cable around in the form of spiral

Wind the AC cable around for one or two layers according to the diameter of the protective layer.



External diameter of the AC cable	Number of layers	Length of the sealing strip wound around the AC cable
25mm~29.9mm	2	80mm~100 mm
30mm~36.9mm	1	80mm~100 mm

Use the sealing strip to wind the AC cable around in the form of spiral as shown in the Fig.3-1.

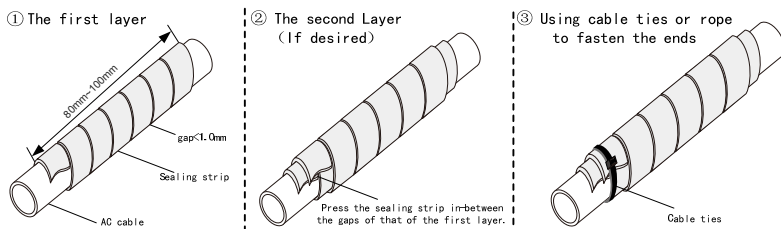


Fig. 3-1 Wind around the AC cable in the form of spiral

*Pictures here are indicatively only. The AC cable and sealing strip in kind prevail.



- Before winding, the surface of the AC cables that will be wound by sealing strip should be wiped clean.
- When you wind the second layer, please press the sealing strip in-between the gaps of that of the first layer.
- Please ensure there is no obvious gap of the spiral seams. The gap width should be less than 1.0mm.
- To prevent the sealing strip tilt, it is suggested to use cable ties or rope to fasten the ends of the sealing strip.
- When the diameter of AC cable protective layer is less than 25mm, you should wind the AC cable around for three layers.

Step 2 Insert the AC cable into the junction box, through the AC cable glands as shown in the Fig.3-2. The exposed length of sealing strip should be the half of the length that the sealing strip winded around the AC cable.


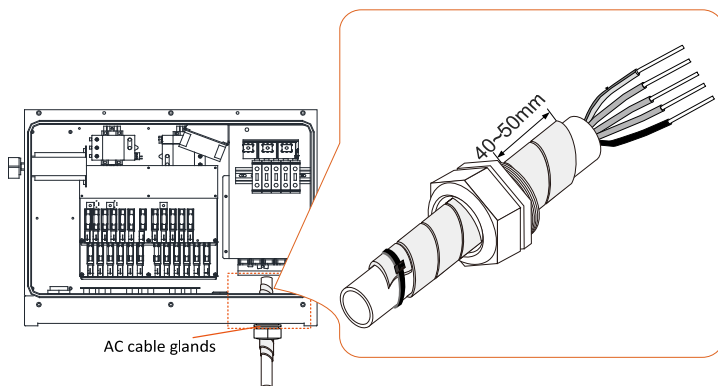


Fig. 3-2 Insert the AC cable into the junction box

3-4 DC Connection


Step 1 Check the connection cable of PV string for the correct polarity and that the open-circuit voltage does not exceed the inverter input limit 1000V, even under the lowest operating temperature.

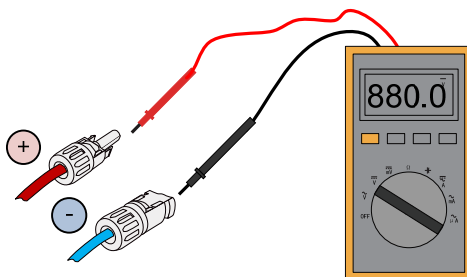

NOTICE

- Check the positive and negative polarity of the PV cells. After confirmation, you can insert the DC connectors into the input terminals on the bottom of the inverter.
- For the same MPPT, reverse connection of a single string is prohibited. A permanent failure of the system or inverter may follow if otherwise.

Step 2 Insert the positive and negative DC connectors into the input terminals on the bottom of the inverter until there is an audible sound.

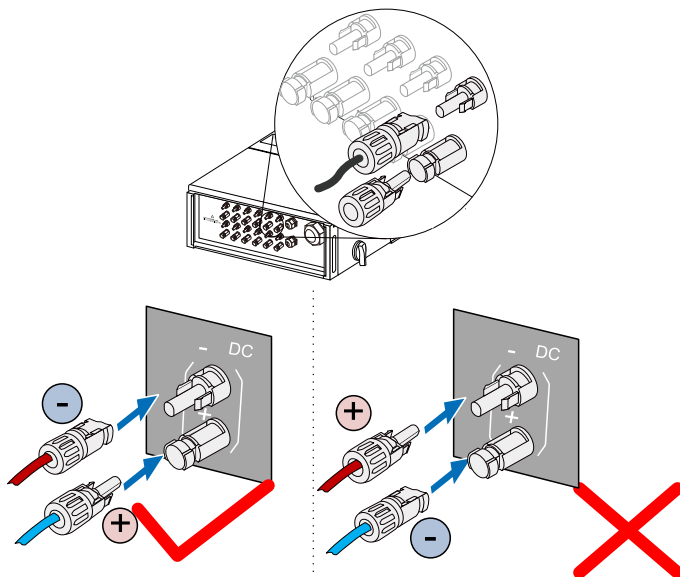


3-5 Second Protective Earth Terminal


Inverter is equipped with second protective earth terminal as specified in EN 50178.

Position of Second PE Terminals

There is a second PE terminal on one side of the inverter. User can perform PE connection if necessary.

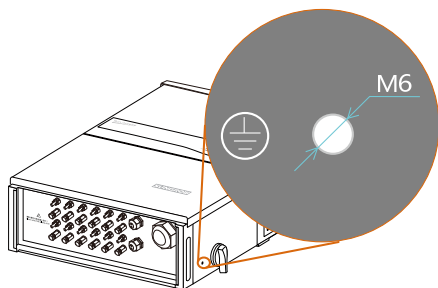

Cable Connection

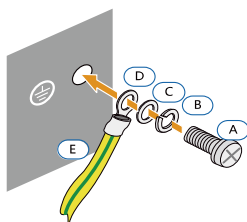


* Connection parts are not within the scope of delivery


Item	Name	Description
A	Screw	M6×12mm
B	Lock washer	-
C	Washer	-
D	Cable socket	-
E	Yellow-green cable	6mm ² (9AWG)

3-6 Communication Connection

There are two communication waterproof connection terminal on the bottom of the inverter. RS485 A/B terminals, RS485 interface and Ethernet interface (optional) are provided on the configuration circuit board of the junction box. A 120Ω terminating resistor can be connected between the A and B communication cable through the dip switch.

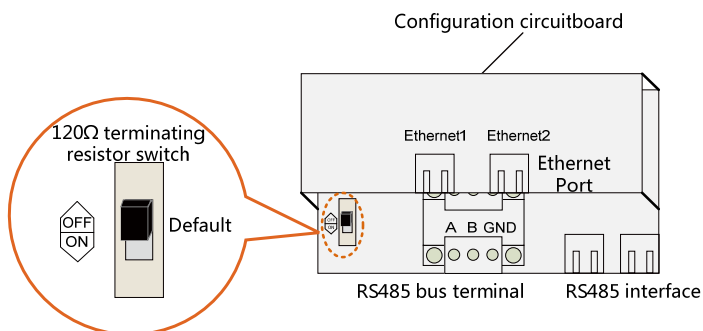

For RJ45 Connection the pins definitions are shown below. In Ethernet cable, Pin 3 white-green cable defines RS485- B while Pin 6 green cable defines RS485+ A.

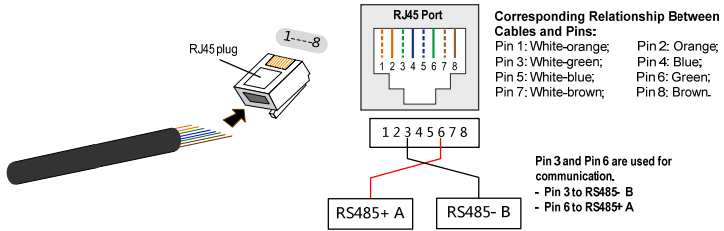

3-7 Completing Installation

Inspect before commissioning and reassemble the front cover of the connection cabinet.

4 Commissioning

Before starting SG60KTL, make sure all installation and connections are completed and verified.

Step 1 Close the AC circuit breaker.

Step 2 Rotate DC switch to “ON” position.

Step 3 Suppose there are sufficient sunlight and enough DC power. PV arrays initialize and supply DC power to inverter. The LCD display is activated when DC voltage exceeds inverter startup voltage. If there is a defect on the display, contact Sungrow.

Button	Operation	Description
	Press for less than 2 seconds	Move upwards or downwards or scroll among set values. Hereinafter, it is referred to as “Press ▼ ”.
	Press for more than two seconds	Return to the previous menu or cancel the command. Hereinafter, it is referred to as “Press ESC ”.
	Press for less than 2 seconds	Move left or right, or turn pages. Hereinafter, it is referred to as “Press ➤ ”.
	Press for more than two seconds	Enter into the sub-menu or confirm the command. Hereinafter, it is referred to as “Press ENTER ”.

Step 4 Press **▼** to choose country code. Confirm the settings by Pressing **ENTER**.

Countries			
☐ GB	☒ DE	☐ FR	☐ IT
☐ ES	☐ AT	☐ AU	☐ CZ
☐ BE	☐ DK	☐ GR	☐ NL
☐ PT	☐ CN	☐ SE	☐ RO
☐ TH	☐ TK	☐ Other	

Step 5 Select the country code according to the installation country of the inverter. Each country code represents corresponding local protective parameters that have been preset before delivery. Before country setting, there is warning screen. Operate according to the warning information and press **ENTER**.

Warning! Only qualified personnel are allowed to adjust following parameters. Improper settings may cause damage to the inverter!
--

Refer to “Protection Parameter Setting” in User Manual for country code explanation. If the inverter is installed where the country code is not included, please choose item “Other” and manually set the protection parameters.

Step 6 If the country code set as GR, a Grid codes page as shown in the right will appear. **Press ▼** to select grid code and **press ENTER** to confirm.

GR

Grid codes
☒ GR_L
☐ GR_JS

If the country code set as DE, a Grid codes page as shown in the right will appear, where LV signifying low-voltage grid; MV signifying medium-voltage grid. **Press ▼** to select grid code and **press ENTER** to confirm.

DE

Grid codes
☒ LV
☐ MV

If the country code set as TK, a Grid codes page as shown in the right will appear. **Press ▼** to select grid code and **press ENTER** to confirm.

TK

Grid codes
☒ AG
☐ YG

If the country code set as TH, a Grid codes page special for Thailand will appear. **Press ▼** to select grid code and **press ENTER** to confirm.

TH

Grid codes
☒ 220V
☐ 230V

If the country code set as Other, a Grid codes page as shown in the right will appear. **Press ▼** to select grid code and **press ENTER** to confirm.

Other

Grid codes
☒ 50Hz
☐ 60Hz

Step 7 If the country selected is not the abovementioned 5 countries, enter the next step directly.

Step 8 After selecting the Grid Code, there will be a “Pro-stage” type selection screen and then corresponding sub-menu will come up. For detailed information, please refer to “Protection Parameter Setting” in User Manual.

Pro-Stage	
☒	Single-stage
☐	Multi-stage


Step 9 Set the inverter time as per local time. Incorrect time setting will affect the data logging. **Press** ➤ to move the cursor and **Press** ▼ to set the specific time and date. **Press ENTER** to confirm setting.

Time	
YYMMDD	
Date:	14/01/31
Time:	10:30:55

Step 10 After configuring all parameters, there will be a “setting confirmation” screen. Check whether all above-mentioned parameters are correct. Confirm by **Pressing ENTER**. Cancel by **Pressing ESC** and reset.

Setting confirmation	
Countries	Other
Pro-stage	Single-stage
Grid codes	MV
Date	2014/01/31
Confirm above settings?	

Step 11 Inverter will enter into startup process. Observe the status of LED indicators and the LCD main screen. If commissioning succeeds, the “RUN” indicator will be on d “Run” will be displayed on the “State” area.

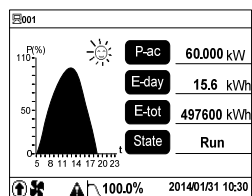

If commissioning fails, the “FAULT” indicator will be on and “Fault” will occur on the display. **Press** ▼ to view “current fault” information. Remove the existing fault and then repeat the commissioning procedures.



Sungrow Power Supply Co., Ltd.

Add: No.1699 Xiyou Rd.,New & High Technology Industrial Development Zone, 230088,Hefei, P. R. China.

Post Zip: 230088

Web: www.sungrowpower.com

E-mail: info@sungrow.cn

Tel: +86 551 6532 7834/6532 7845

Fax: +86 551 6532 7856

Specifications are subject to changes without advance notice.